

# VICTOR

# 1776

12 DIGIT HEAVY DUTY PRINTING CALCULATOR



## INSTRUCTION MANUAL


## TABLE OF CONTENTS

OPERATIONS AND MAINTENANCE.....	2
ACTIVATE BACKUP BATTERY.....	2
REPLACING INK RIBBON.....	2
HOW TO FEED THE PAPER TAPE.....	3
BATTERY REPLACEMENT.....	4
KEYBOARD LAYOUT.....	5
SLIDE SWITCH FEATURES.....	6
KEY FEATURES.....	8
TROUBLESHOOTING.....	10
APPLICATION EXAMPLES.....	11
SETTING DATE AND TIME.....	28,29
TECHNICAL SPECIFICATION.....	30
WARRANTY.....	31

## OPERATIONS AND MAINTENANCE

**Before Turning On** - Please remove ribbon-cushion placed on a ribbon and check the rating label on the bottom to see if the rated voltage corresponds to the local voltage before plug in AC cord.

**Note:** Ribbon cushion is located under printer cover.

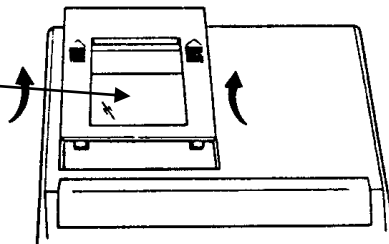


### CAUTIONS

1. Do not place the machine in hot, dusty or damp locations.
2. To clean the housing use a silicon-treated cloth. Do not use water or detergents.
3. Do not place anything on the housing, particularly on the head of the printer mechanism.
4. Turn off the power switch before removing the plug from AC wall outlet.
5. Turn the power switch off while not in use.
6. The socket-outlet shall be installed near the equipment and shall be easily accessible.

## ACTIVATE BACKUP BATTERY

Before start using the calculator, please remove the insulation paper below the backup battery.

1. Turn the AC power switch OFF and remove the battery compartment cover located on the bottom case.
2. Remove the insulation paper located below the backup battery.
3. PRESS THE RESET SWITCH.
4. Replace the battery compartment cover.
5. Turn ON the AC power switch.
6. Program the date and time according to the instruction manual.

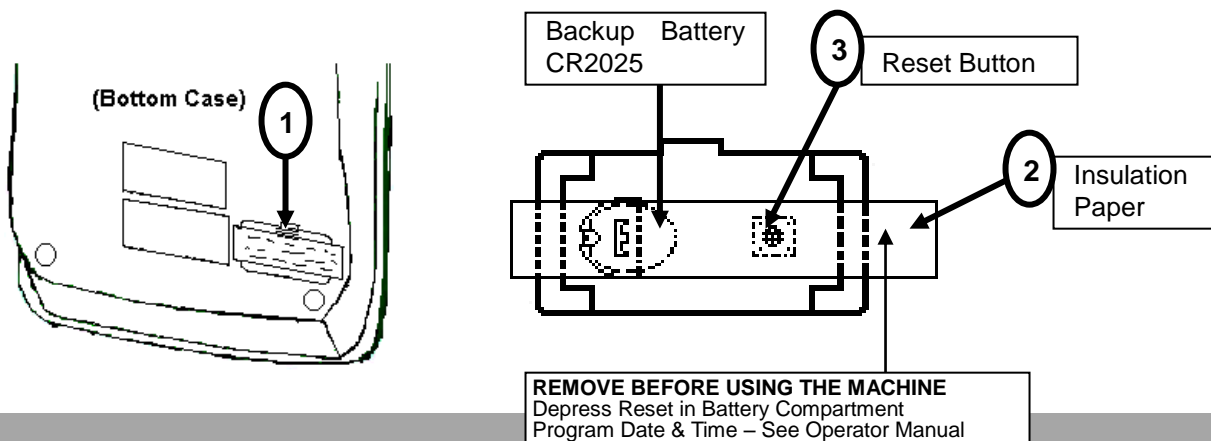


## REPLACING INK RIBBON


Your calculator is shipped with a 2-color ribbon already in place. You do not need to install or

change it before you begin using the calculator. When you have been using your calculator for some time, however, the print will gradually become faint, indicating that you should change the ribbon. To change the ribbon, follow these steps.


1. Remove paper roll, tearing paper at rear of calculator. Use the Paper Advance (↑) key to feed the remaining paper tape through the printer. Then remove the printer cover.
2. Remove the old ribbon by pulling upward.
3. Install the ribbon spool with the black edge up. Roll from the outside of the full spool and place the first spool on the spindle not engaged by the lever. Thread the new ribbon along the outside of the guides and in front of the print wheels. Switch the lever to the other side and replace the second spool.
4. Rotate the spools to take up any slack. Replace the printer cover and the paper tape.

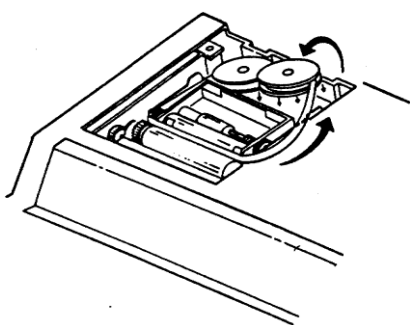

Correct direction

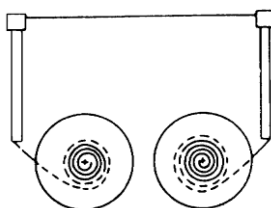

Incorrect direction

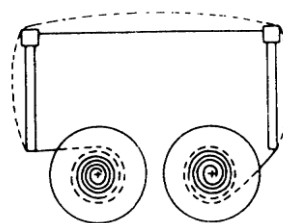


## HOW TO FEED THE PAPER TAPE

1. Put the new paper roll on the paper arm.
2. Insert the paper into the slot as indicated.
3. Depress the paper feed key.
4. Suitable paper roll:
  - Width: max. 57.5mm (2.25")
  - Diameter: max. 50mm (1.97")
  - Paper: Normal paper
  - (45kg/1000 sheets/788 x 1091 mm)



## BATTERY REPLACEMENT

1. Turn the AC power switch off
2. Remove - the battery compartment cover located on the calculator bottom case.
3. Remove the old battery and install a new CR2025 or equivalent.
4. Turn on the AC power switch
5. **PRESS THE RESET BUTTON**
6. Replace the battery compartment cover.
7. Reprogram the date and time.  
(See page 27 & 28)

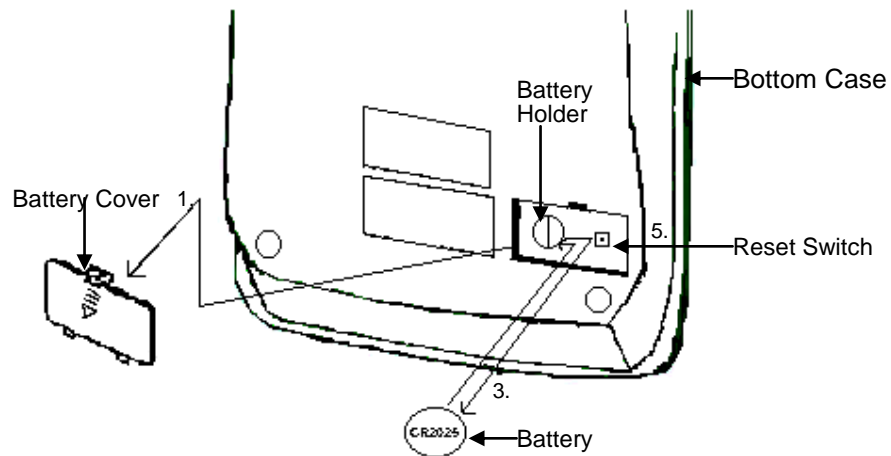


### **CAUTION**

**Danger of explosion if battery is incorrectly replaced. Only replace with the same or equivalent type recommended by the manufacturer.**

**Dispose of used batteries according to the manufacturers' instructions.**

## KEYBOARD LAYOUT

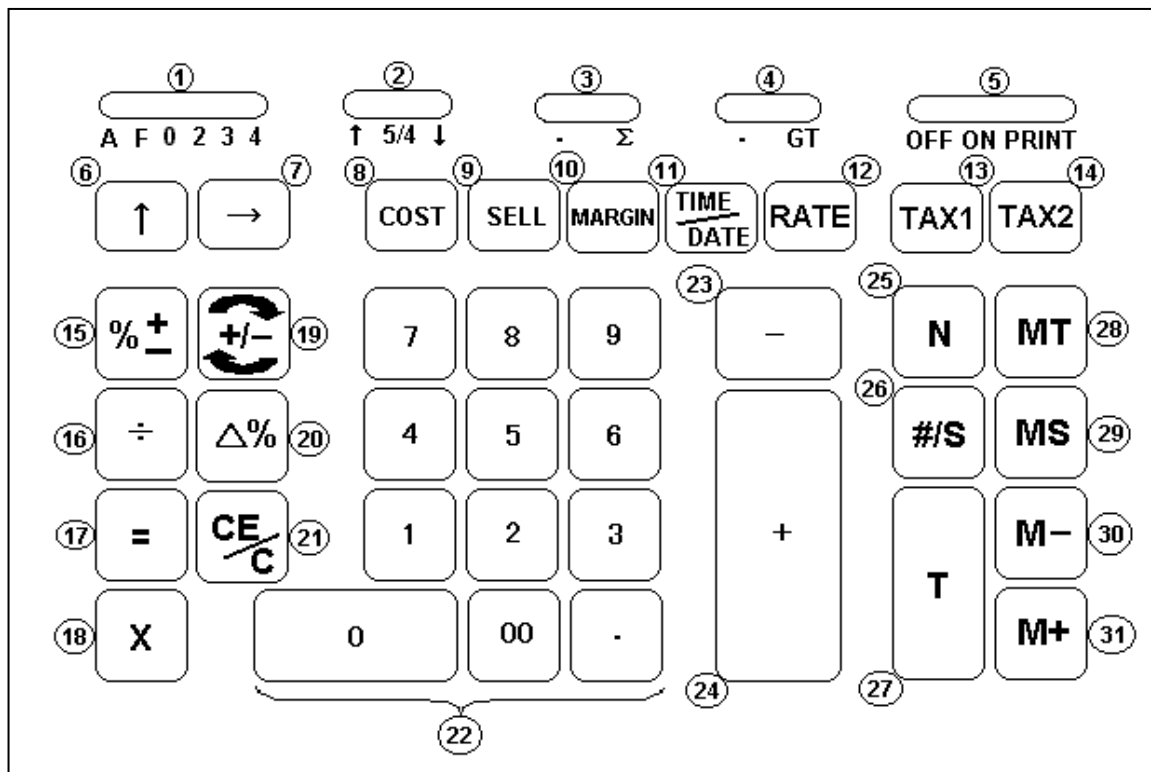

1. Decimal Selector	17. Equal
2. Rounding Selector	18. Multiplication
3. Sigma Switch	19. Sign Change
4. Grand Total Switch	20. Delta Percentage
5. Print Switch	21. Clear Entry / Clear
6. Paper Feed	22. Numeric Key Pad
7. Back Space	23. Subtraction
8. Cost	24. Addition
9. Sell	25. Item Count
10. Margin	26. Non-add / Subtotal
11. Time/Date Display	27. Total
12. Tax Rate Preset	28. Memory Total
13. Tax 1	29. Memory Subtotal
14. Tax 2	30. Memory Subtraction
15. Percentage	31. Memory Addition
16. Division	

This section describes the mode switches, data entry keys, and operating keys provided on your calculator. The following terms are used in discussing your calculator's operation:

- The **accumulator** is the area of the calculator's logic that stores a running total of the results of addition and subtraction operations. It is the "adding machine" portion of the calculator.
- The **calculating register** is the area of the calculator's logic where the intermediate and final results of multiplication, division and percentage calculations are stored. The contents of the calculating register do not affect the accumulator.
- The **keyboard register** is the area of the calculators logic that stores the value that will immediately be used in the next calculation.
- The **item count register** is the area of the calculator's logic that counts your entries into the accumulator. Each positive entry is counted as one item. Each Negative entry is subtracted resulting in a net item count. It is also net or gross programmable.
- The **memory register** is the area of the calculator's logic that accumulates amounts you add to or subtract from the memory. Because the memory register is independent of the accumulator and the calculating register, it retains its value until you clear it with the Memory Total (**MT**) key.

## SLIDE SWITCH FEATURES

This section illustrates and describes the mode switches you can use to control your calculator's operation.

### 1. A F 0 2 3 4 **Decimal Point Selector**

**A** Monetary Add Mode: At this setting, amounts entered are assumed to be monetary. The calculator automatically supplies a decimal point to the left of the last two digits entered. Use this setting to add, subtract, multiply and divide decimals.

#### **Units/price mode operation:**

**Multiplication:** The first factor will be entered as a whole number and the second factor will have a decimal point supplied to the left of the last two digits.

**Division:** The first factor will have a decimal point supplied to the left of the last two digits and the second factor will be entered as a whole number.

- F** Floating decimal point mode; this setting specifies that all digits of the result be shown up to a maximum of 12 digits. If the result exceeds these capacities, excess digits to the right of the decimal point are dropped. No rounding takes place.
- 0,2,3,4** Fixed decimal point mode; these settings specify the number of digits to the right of the decimal point that are shown in the result.
- 2. ↓ 5/4 ↑** **Rounding Switch**  
       ↓  
       5/4  
       ↑
- Absolute round down (truncation).
- This setting causes automatic round off. If the last digit of the result that will be printed or printed/displayed upon rounding is followed by a value of 0 to 4, the digit is unchanged. If the last digit of the result that will be printed or printed/displayed upon rounding is followed by a value of 5 to 9, the digit is rounded up.
- Absolute round up.
- 3.  $\Sigma$  Switch**
- Calculation without sigma.
  - $\Sigma$  Calculation with Sigma. The results of multiplication or division calculations completed by the = or % keys are automatically added to the accumulator. The sum of these accumulations is displayed by pressing **#/S** key and displayed and cleared by pressing the **T** key.
- 4. Grand Total Switch**
- Calculation without Grand Total.
  - GT** Any total taken with **T** key is automatically accumulated to memory. The accumulated grand total can be recalled by pressing the **MT** key.
- 5. OFF ON PRINT Printer Selects Switch**  
       OFF  
       ON  
       PRINT
- Turn Off the calculator.
- Printer is activated only when feed key or **#/S** key is pressed.
- Printer is activated as long as calculator is turned on.



## KEY FEATURES

**6. [↑] Paper Feed key**

Advance the paper roll.

**7. [→] Right Shift key**

Deletes right most character of a live entry.

**8. [COST] Cost key**

Used to enter the Cost factor in a Gross Profit Margin calculation.

**9. [SELL] Sell key**

Used to enter the Selling price in Gross Profit Margin calculation.

**10. [MARGIN] Profit Margin key**

Used to enter the desired Margin in a Gross Profit Margin calculation.

**11. [TIME/DATE] Time and Date Display key**

Used to display or program the date and time. Depressing this key once will cause the date to display, a second depression will display the time. Holding the key down for three seconds will cause the date or time to flash, this is the program mode.

**12. [RATE] TAX Rate Preset key**

Used to enter TAX rate.

**13. [TAX 1] Tax 1 key**

Calculate an amount of Tax 1 with tax rate preset by **RATE** key. Use **+** key for calculating an amount include VAT, and **-** key for calculating an amount excluding VAT.

**14. [TAX 2] Tax 2 key**

Calculate an amount of Tax 2 with tax rate preset by **RATE** key. Use **+** key for calculating an amount include VAT, and **-** key for calculating an amount excluding VAT.

**15. [%±] Percent key**

Completes percent calculation when **X** or **÷** key is used.

**16. [÷] Division key**

The Division key performs division, automatic constant division and intermediate sequential operations. It establishes the next amount as a constant divisor. The **÷** key also causes the calculator to divide when you depress the **=**, **%**, **M+**, **M-**, **X** or **÷** key. Each divisor entry is retained as a constant (except **M+** and **M-** entries) until you depress the **X**, **÷** or **CE/C** key.

**17. [=] Equal key**

To get the result in multiplication or division.

**18. [X] Multiplication key**

The multiplication key performs multiplication, automatic constant multiplication and intermediate sequential operations. It establishes the amount entered or the previous printed or printed/displayed amount as a constant multiplicand. The **X** key also causes the calculator to multiply when you depress the **=**, **%**, **M+**, **M-**, **X** or **÷** key. Each multiplicand entry is retained as a constant (except **M+** and **M-** entries) until you depress the **X**, **÷**, or **CE/C** key.

**19. [+/-] Sign Change key**

Reverse the sign on the display.

**20. [Δ%] Delta Percentage**

Automatically compares any two amounts and then calculates and prints the difference and percent of change.

**21. [CE/C] Clear Entry / Clear key**

Clears a live entry by pressing this key once. Press twice to clear the accumulator or pending calculation. Does not clear the Memory or Grand total.

**22. [0]-[9], [00] & [.] Numeric keys.**

The calculator uses the conventional 10-key indexing keyboard, and include the double zero key and decimal point key. Whole numbers are entered exactly as they are written.

**23. [-] Minus key**

Subtracts an amount from the accumulator. To subtract the same amount more than one time (repeat subtraction), enter that amount once and depress the **-** key as many times as necessary. If this key is depressed immediately after **%** key, it works as percent minus key.

**24. [+] Plus key**

Adds an amount to the accumulator. To add the same amount more than one time (repeat addition), enter that amount once and depress the **+** key as many times as necessary. If this key is depressed immediately after **%** key, it works as percent plus key.

**25. [N] Item Count Key**

Calculations with item count and/or averaging. Also used to set the N count to Gross or Net.

**26. [# / S] Date / Subtotal Key**

**# :** It will print live entry as an identifier as an invoice number with “#” mark.

**S :** It prints but does not clear the accumulator.

**27. [T] Total Key**

Prints and clears the accumulator. When this key is pressed with the “GT” switch is on, the result is accumulated automatically in the memory register.

**28. [MT] Memory Total key**

Prints and clears the memory.

**29. [MS] Memory Subtotal key**

Prints but do not clear the memory.

**30. [M-] Memory Minus key**

Subtracts an amount from memory. If there is a live calculation pending, the Memory Minus key will complete the calculation and subtract the amount from Memory.

**31. [M+] Memory Plus key**

Adds an amount to memory. If there is a live calculation pending, the Memory plus key will complete the calculation and accumulate the result to Memory.

**32. [÷], [=] Square Root key**

By pressing the ÷ and then the = key, the square root result will be achieved.

## TROUBLESHOOTING

Many problems such as no power, no key response etc. Can be resolved using the RESET button. Please follow these instructions:

1. Machine must be plugged in and ON, and in the PRINT mode.
2. Turn machine over so you can see the battery compartment.
3. Open the battery compartment and locate the RESET button located next to the silver battery.
4. Depress the RESET button; you will hear the machine cycle. If you do not hear the machine recycle, push the button a 2<sup>nd</sup> time.
5. Replace the battery compartment cover and turn the machine right side up.
6. Test the machine.

If this procedure has not successfully resolved your problem please call 1-800-628-2420 for future assistance.

## APPLICATION EXAMPLES

### 1. BACKSPACE

	<u>Decimal</u> 4	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>		
5.4321 + 2.34567 = ?	5.4321 [+]	5.4321	<div style="border: 1px solid black; padding: 5px;">                     5.4321 +                       2.34567 +                      7.7778 T                 </div>		
	2.3457 [->]	2.345			
	67 [+]	7.77777			
	[T]	7.7778			

### 2. ROUNDING FOR ADDITION / SUBTRACTION

	<u>Decimal</u> 0	<u>Rounding</u> ↓	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>		
3.4 + 2.1 = ?	3.4 [+]	3.4	<div style="border: 1px solid black; padding: 5px;">                     3.4 +                      2.1 +                      5. T                 </div>		
	2.1 [+]	5.5			
	[T]	5.			

	<u>Decimal</u> 0	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>		
3.4 + 2.1 = ?	3.4 [+]	3.4	<div style="border: 1px solid black; padding: 5px;">                     3.4 +                      2.1 +                      6. T                 </div>		
	2.1 [+]	5.5			
	[T]	6.			

### 3. ADDITION & SUBTRACTION

		<u>Decimal</u> F	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>		
2 + 3.1415926 - 6 = ?	2	[+]	2.	2. +		
	3.1415926	[+]	5.1415926	3.1415926 +		
	6	[-]	- 0.8584074	6. -		
		[T]	- 0.8584074	0.8584074 -T		

### 4. ADDITION / SUBTRACTION IN ADD MODE

		<u>Decimal</u> A	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>		
1.23 - 4.56 + 7.89 = ?	123	[+]	1.23	1.23 +		
	456	[-]	- 3.33	4.56 -		
		[#/S]	- 3.33	3.33 -S		
	789	[+]	4.56	7.89 +		
		[T]	4.56	4.56 T		

## 5. ITEM COUNT PRESETTING

<u>Decimal</u>	<u>Rounding</u>	<u>Σ</u>	<u>GT</u>	<u>Print</u>
A	5/4	.	.	PRINT

**The Item count is Programmable for Gross Count or Net Count.**

**Gross Item Count:** All entries both positive (+) and Negative (-) increment the counter positively.

**Example:**  $10 + 2 + 3 - 5 = 10$       Item count is 4

**Net Item Count:** Plus entries increment the counter, minus entries decrement the counter.

**Example:**  $10 + 2 + 3 - 5 = 10$       Item count is 2

<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>
	[CE/C]	0.	0. C
Setting Item	(Press & Hold 3 sec)[N]	(Blinking) <sup>0</sup> 000.	000
Cross Item Count	[+]	<sup>0</sup> 000.	
	[CE/C]	0.	0. C
Setting Item	(Press & Hold 3 sec)[N]	(Blinking) <sup>0</sup> 000.	000
Net Item Count	[-]	<sup>0</sup> 000.	

## 6. (A) ADDITION / SUBTRACTION WITH ITEM COUNT IN GROSS SETTING

<u>Decimal</u>	<u>Rounding</u>	<u>Σ</u>	<u>GT</u>	<u>Print</u>
A	5/4	.	.	PRINT

<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>
11.32 + 7.98 - 33.33 = ?	1132	[+] 11.32	11.32 +
	798	[+] 19.30	7.98 +
		[N] <sup>0</sup> 002.	002
		[#/S] 19.30	19.30 S
	3333	[-] - 14.03	33.33 -
		[N] <sup>0</sup> 003.	003
		[T] - 14.03	14.03 -T
		[CE/C] 0.	0. C

# 6. (B) ADDITION / SUBTRACTION WITH ITEM COUNT IN NET SETTING

			<u>Decimal</u> A	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>		<u>Paper</u>		
11.32 + 7.98 – 33.33 = ?	1132	[+]	11.32				11.32 +
	798	[+]	19.30				7.98 +
		[N]	0002.			002	
		[#/S]	19.30				19.30 S
	3333	[-]	- 14.03				33.33 –
		[N]	0001.			001	
		[T]	- 14.03				14.03 -T
		[CE/C]	0.				0. C

# 6. (C) ITEM COUNT WITH AVERAGING

			<u>Decimal</u> A	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>		<u>Paper</u>		
11.32 + 7.98 – 33.33 = ?	123	[+]	1.23				1.23 +
	456	[+]	5.79				4.56 +
	789	[+]	13.68				7.89 +
	987	[+]	23.55				9.87 +
		[T]	23.55				23.55 T
		[N]	0004.			004	
		[N]	5.89				5.89 *

## 7. GRAND TOTAL MEMORY

			<u>Decimal</u> A	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> GT	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>			<u>Display</u>		<u>Paper</u>	
13.20 9.55		[CE/C]		0.		0. C	
8.30 7.36	13.2	[+]		13.20		13.20 +	
+ 2.95 18.33	8.3	[+]		21.50		8.30 +	
24.45 +35.24 =T?	2.95	[+]		24.45		2.95 +	
		[T]	M	24.45		24.45 M <sup>T</sup> +	
	9.55	[+]	M	9.55		9.55 +	
	7.36	[+]	M	16.91		7.36 +	
	18.33	[+]	M	35.24		18.33 +	
		[T]	M	35.24		35.24 M <sup>T</sup> +	
		[MT]		59.69		59.69 MT	

## 8. REPETATIVE CALCULATION WITH REFERENCE TO DATE

Reference date is April 25, 2004

			<u>Decimal</u> A	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>			<u>Display</u>		<u>Paper</u>	
6.54 + 6.54 + 6.54 –	4.25.2004	[#/S]		4.252004		# 4.25.2004	
7.89 – 7.89 = ?	654	[+]		6.54		6.54 +	
		[+]		13.08		6.54 +	
		[+]		19.62		6.54 +	
	789	[–]		11.73		7.89 –	
		[–]		3.84		7.89 –	
		[T]		3.84		3.84 T	



## 9. MULTIPLICATION

		<u>Decimal</u> 2	<u>Rounding</u> ↓	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>		
1.238 x 456 =?	1.238 [x]		1.238	1.238 x 456.00 = 564.52 *		
	456		456.			
	[=]		564.52			

## 10. SEQUENTIAL (CHAIN) MULTIPLICATION

		<u>Decimal</u> 3	<u>Rounding</u> ↑	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>		
3.21 x 4.5 x 6.324 =?	3.21		3.21	3.210 x 4.500 x 6.324 = 91.351 *		
	[x]		3.210			
	4.5		4.5			
	[x]		14.445			
	6.324		6.324			
	[=]		91.351			

## 11. CONSTANT MULTIPLICATION

		<u>Decimal</u> 2	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>		
2 x 4 = 8	2 [x]		2.00	2.00 x 4.00 = 8.00 *		
2 x 5 = 10	4 [=]		8.00			
2 x 6 = 12						
	5 [=]		10.00	5.00 = 10.00 *		
	6 [=]		12.00			
				6.00 = 12.00 *		

## 12. CONSTANT MULTIPLICATION WITH ACCUMULATION

	<u>Decimal</u> 2		<u>Rounding</u> 5/4	$\Sigma$ $\Sigma$	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>		
\$1.79 x 167 = \$298.93	1.79	[x]	1.79	1.79 x		
1.79 x -230 = -411.70	167	[=]	298.93	167.00 =		
1.79 x 140 = +186.16				298.93 +		
= ?	230	[+/-]	- 230.	230.00 -=		
		[=]	- 411.70	411.70 -+		
	104	[=]	186.16	104.00 =		
		[T]	73.39	186.16 +		
				73.39 T		

## 13. DIVISION

	<u>Decimal</u> 3		<u>Rounding</u> ↓	$\Sigma$ .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>		
178 ÷ 6 = ?	178	[÷]	178.000	178.000 ÷		
	6	[=]	29.666	6.000 =		
				29.666 *		

## 14. CONSTANT DIVISION

	<u>Decimal</u> 2		<u>Rounding</u> 5/4	$\Sigma$ .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>		
755 ÷ 4 = 188.75	755	[÷]	755.00	755.00 ÷		
409 ÷ 4 = 102.25	4	[=]	188.75	4.00 =		
32 ÷ 4 = 8.00				188.75 *		
	409	[=]	102.25	409.00 =		
				102.25 *		
	32	[=]	8.00	32.00 =		
				8.00 *		

## 15. DIVISION WITH ACCUMULATION

			<u>Decimal</u> 4	<u>Rounding</u> 5/4	$\frac{\Sigma}{\Sigma}$	$\frac{GT}{.}$	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>		<u>Paper</u>		
145 ÷ 12.25 +	145	[÷]	145.0000		145.0000 ÷		
15130 ÷ 123.50 +	12.25	[=]	11.8367		12.2500 =		
159.36 ÷ 10.25 = ?					11.8367 +		
	15130	[÷]	15,130.0000		15,130.0000 ÷		
	123.50	[=]	122.5101		123.5000 =		
					122.5101 +		
	159.36	[÷]	159.3600		159.3600 ÷		
	10.25	[=]	15.5473		10.2500 =		
					15.5473 +		
		[T]	149.8941		149.8941 T		

## 16. UNIT / PRICE CALCULATION

			<u>Decimal</u> A	<u>Rounding</u> 5/4	$\frac{\Sigma}{\Sigma}$	$\frac{GT}{.}$	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>		<u>Paper</u>		
132 x \$5.67 = \$748.44	132	[x]	132.00		132.00 x		
146 x \$4.45 = \$649.70	567	[=]	748.44		5.67 =		
155 x \$3.11 = \$482.05					748.44 +		
Total = ?	146	[x]	146.00		146.00 x		
	445	[=]	649.70		4.45 =		
					649.70 +		
	155	[x]	155.00		155.00 x		
	311	[=]	482.05		3.11 =		
					482.05 +		
		[T]	1,880.19		1,880.19 T		

17. TAX RATE PRESETTING

		<u>Decimal</u>	<u>Rounding</u>	<u>Σ</u>	<u>GT</u>	<u>Print</u>
		2	↑	.	.	PRINT
<u>Calculation</u>	<u>Enter</u>	<u>Display</u>		<u>Paper</u>		
Preset TAX 1 = 7.5% (Press & Hold 3 sec)	[CE/C]	0.		0. C		
	[RATE]	(Blinking) 0.				
	7.5	7.50		...1...		
	[TAX 1]			7.50 %		
Preset TAX 2 = 18.6% (Press & Hold 3 sec)	[CE/C]	0.		0. C		
	[RATE]	(Blinking) 0.				
	18.6	18.60		...2...		
	[TAX 2]			18.60 %		

## 18. TAX CALCULATION

			<u>Decimal</u> 2	<u>Rounding</u> ↑	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>		<u>Paper</u>		
Price without Tax 1		[CE/C]	0.		0. C		
=261.56	261.56	[TAX 1]	261.56		261.56		
Price with Tax 1 = ?		[+]	281.18		...1...		
						7.50 %	
						19.62 Δ	
						281.18 *	
Price without Tax 1		[TAX 1]	281.18		281.18		
		[-]	261.56		...1...		
						7.50 %	
						19.62 Δ	
						261.56 *	
Price without Tax 2		[CE/C]	0.		0. C		
=300	300	[TAX 2]	300.		300.00		
Price with Tax 2 = ?		[+]	355.80		...2...		
						18.60 %	
						55.80 Δ	
						355.80 *	
Price without Tax 2		[TAX 2]	355.80		355.80		
		[-]	300.00		...2...		
						18.60 %	
						55.80 Δ	
						300.00 *	

<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>
VAT including TAX 1 and TAX 2:			
	200 [TAX 1]	200.	200.00
	[TAX 2]	200.	7.50 %
	[+]	252.20	15.00 Δ
			18.60 %
			37.20 Δ
			52.20 Δ
			252.20 *

Price excluding TAX 1 and TAX 2:

[TAX1] 252.20  
[TAX2] 252.20  
[-] 200.00

252.20
7.50 %
15.00 Δ
18.60 %
37.20 Δ
52.20 Δ
200.00 *

**NOTE: TAX calculation is fix to 2 decimal points and the result will be rounded up.**

## 19. PERCENT ADD ON

<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>
Price = \$3.95	3.95 [x]	3.95	3.95 x
Discount = 5%	5 [%+]	0.19	5.00 %
Tax Amount = \$0.19			0.19 *
Net Amount= \$4.14	[+]	4.14	4.14 +%

## 20. PERCENT DISCOUNT

			<u>Decimal</u> 2	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>			<u>Display</u>	<u>Paper</u>		
Price = \$169.50	169.5	[x]		169.50	169.50 x		
Discount = 14%	14	[%±]		23.73	14.00 %		
Discount Amount = \$23.73					23.73 *		
Net = \$145.77		[-]		145.77	145.77 -%		

## 21. CHAIN DISCOUNT WITH TOTAL AMOUNT OF DISCOUNT

				<u>Decimal</u> 2	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>				<u>Display</u>	<u>Paper</u>		
\$23.15 less 15/10/5% =	23.15	[M+]			23.15	23.15 M+		
\$16.82 Net		[x]	M		23.15	23.15 x		
Total Amount of	15	[%±]	M		3.47	15.00 %		
Discount \$6.33						3.47 *		
		[-]	M		19.68	19.68 -%		
		[x]	M		19.68	19.68 x		
	10	[%±]	M		1.97	10.00 %		
		[-]	M		17.71	1.97 *		
		[x]	M		17.71	17.71 -%		
	5	[%±]	M		0.89	17.71 x		
		[-]	M		16.82	5.00 %		
						0.89 *		
		[M-]	M		16.82	16.82 -%		
		[MT]			6.33	16.82 M-		
						6.33 MT		

## 22. PERCENT CHANCE AND AMOUNT OF DIFFERENCE

	<u>Decimal</u> 2	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>		
Last Year's Expense \$60.00	60	[Δ%]	60.00	60.00	Δ
This Year's Expense \$130.00	130	[=] / [%±]	116.67	130.00	=
Amount of Difference \$70.00				70.00	Δ*
Percent of Chance 116.67%				116.67	Δ%

## 23. CONSTANT PERCENT CHANGE AND AMOUNT OF DIFFERENCE

	<u>Decimal</u> 2	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>		
Last Year's Expense \$125,000	125000	[Δ%]	125,000.00	125,000.00	Δ
This Year's Expense \$175,000	175000	[=]	40.00	175,000.00	=
Next Year's Expense \$210,000	210000	[=]	68.00	50,000.00	Δ*
				40.00	Δ%
Percent of Chance ?				210,000.00	=
Amount of Difference ?				85,000.00	Δ*
				68.00	Δ%



## 24. GROSS PROFIT MARGIN CALCULATION COST-SELL-MARGIN

			<u>Decimal</u> 0	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>			
Cost = 100	100	[COST]	100.	100. C	20. M%	25. Δ*	125. S
Margin = 20%	20	[MARGIN]	125.				
Sell = ?							
Cost = 100	100	[COST]	100.	100. C	25. Δ*	20. M%	125. S
Sell = 125	125	[SELL]	20.				
Margin = ?							
Sell = 125	125	[SELL]	125.	125. S	20. M%	25. Δ*	100. C
Margin = 20%	20	[MARGIN]	100.				
Cost = ?							

## 25. MARKDOWN AND SELLING PRICE

			<u>Decimal</u> 2	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>		<u>Display</u>	<u>Paper</u>			
Item Cost \$100	100	[COST]	100.00	100.00 C	6.50 M%	6.10 Δ*	93.90 S
Markdown (Percent) 6.5%	6.5	[+/-]	- 6.5				
(Base on to be determined selling price)		[MARGIN]	93.90				
Markdown (Amount) \$ 6.10							
Selling Price \$ 93.90				93.90 S			

**26. SQUARE ROOT**-You can use the  $\div$  and = key to calculate square root

	<u>Decimal</u> 2	<u>Rounding</u> 5/4	<u><math>\Sigma</math></u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>		
$\sqrt{58} = 7.62$	58 $\div$ [=]	58.00 7.62	58.00 $\div$ 58.00 R 7.62 *		

**27. INVOICE – INVOICE NUMBER 88901; DATE 10/3/04**

	<u>Decimal</u> A	<u>Rounding</u> 5/4	<u><math>\Sigma</math></u> $\Sigma$	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>	<u>Display</u>	<u>Paper</u>		
<b>Quantity Price Net</b>	88901    [#S]	88,901.	# 88901		
16      3.29    52.64	10.3.04    [#S]	10.304	# 10.03.04		
108      1.39 <u>150.12</u>	16      [x]	16.00	16.00 x		
Gross              202.76	3.29    [=]	52.64	3.29 =		
Less 10% Discount			52.64 +		
	- <u>20.28</u>	108    [x]	108.00 x		
	182.48	1.39    [=]	1.39 =		
Tax 5%	+ <u>9.12</u>		150.12 +		
Net              191.60		[T]	202.76 T		
		[x]	202.76 x		
	10    [%+]	20.28	10.00 %		
		[-]	20.28 +		
		[x]	182.48 -%		
	5    [%+]	9.12	182.48 x		
		[+]	5.00 %		
			9.12 +		
		[CE/C]	191.60 +%		
			0. C		

## 28. PAYROLL

Decimal      Rounding       $\Sigma$       GT      Print  
                          2                      5/4                       $\Sigma$                       .                      PRINT

### Calculation

#### **Given**

\$ 5.75 Hourly Rate  
 38 Hours Worked  
 7.15% FICA  
 \$ 23.75 Withholding  
 \$ 4.75 Insurance

#### **Find**

Regular Pay      \$ 218.50  
 Total Deductions      \$ 44.12  
 Net Pay      \$ 174.38

### Calculation

#### Enter

#### Display

#### Paper

See Above

5.75	[x]		5.75
38	[M+]	M	218.50
	[x]	M	218.50
7.15	[%±]	M	15.62
23.75	[+]	M	39.37
4.75	[+]	M	44.12
	[T]	M	44.12
	[M-]	M	44.12
	[MT]		174.38

5.75	x
38.00	=
218.50	M+
218.50	x
7.15	%
15.62	+
23.75	+
4.75	+
44.12	T
44.12	M-
174.38	MT

## 29. MEMORY CALCULATION

				<u>Decimal</u> F	<u>Rounding</u> 5/4	<u>Σ</u> .	<u>GT</u> .	<u>Print</u> PRINT
<u>Calculation</u>	<u>Enter</u>			<u>Display</u>		<u>Paper</u>		
		[CE/C]		0.		0. C		
100 + 200 = ?	100	[+]		100.		100. +		
900 - 500 = ?	200	[+]		300.		200. +		
20 X 7 = ?		[T]		300.		300. T		
12 X 5 = ?								
Total ?		[M+]	M	300.		300. M+		
	900	[+]	M	900.		900. +		
	500	[-]	M	400.		500. -		
		[T]	M	400.		400. T		
		[M+]	M	400.		400. M+		
	20	[X]	M	20.		20. x		
	7	[=]	M	140.		7. =		
						140. *		
		[M+]	M	140.		140. M+		
	12	[X]	M	12.		12. x		
	5	[M+]	M	60.		5. =		
						60. M+		
		[MS]	M	900.		900. MS		
		[MT]		900.		900. MT		

### 30. SETTING THE DATE

Set Slide Switches as Example Below:

EXAMPLE: Set DATE to September 14, 2004 (09-14-04)

Step	Enter	Depress This Key	Your Display Will Show	Tape Will Read
1.		Clear Key ( <b>CE/C</b> )	0.	0.C
2.		<b>TIME/DATE</b> Key and hold until display flashes	Flashing Numbers in This Format - MM-DD-YYYY	
3.	09		9	
4.	14		914	
5.	04		91404	
6.		Tap <b>TIME/DATE</b> Key	09-14-2004	
7.		<b>#/S</b> Key	09-14-2004	# 9.14.2004

Decimal      Rounding      Σ      GT      Print  
 2                      5/4                      .                      .                      PRINT

1. Depress the **CE/C** key. Your display will show 0. and the tape will read 0.C.
2. Depress the **TIME/DATE** key and hold until the display is flashing.
3. Enter the month, in our example, 09. Your display will show 9.
4. Enter the day, in our example, 14. Your display will show 914.
5. Enter the year, in our example 2004, as 04. Your display will show 91404.
6. Tap the **TIME/DATE** key to set the DATE. Your display will now show 09-14-2004.
7. To PRINT the DATE, depress the **(#/S)** key, your tape will show # 9.14.2004.

**NOTE:** The only key to enter the Date/Time display mode is the **TIME/DATE** key. The only key to exit the Time/Date display mode is the **CE/C**.

### 31. SETTING THE TIME

Set Slide Switches as Example Below:

EXAMPLE: Set TIME to 4:37 PM

Step #	Enter	Depress This Key	Your Display Will Show	Tape Will Read
1.		Clear Key ( <b>CE/C</b> )	0.	0.C
2.		<b>TIME/DATE</b> Key and hold until display flashes	Flashing Numbers in This Format - MM-DD-YYYY	
3.		Tap <b>TIME/DATE</b> key to switch to Time Mode	Flashing Numbers in This Format – HH-MM-SS	
4.	16		16	
5.	37		1637	
6.		Tap <b>TIME/DATE</b> Key	P 04-37-00	
7.		<b>#/S</b> Key	P 04-37-00	#•04 •37
<div> <div><u>Decimal</u></div> <div>2</div> </div> <div> <div><u>Rounding</u></div> <div>5/4</div> </div> <div> <div><u>Σ</u></div> <div>.</div> </div> <div> <div><u>GT</u></div> <div>.</div> </div> <div> <div><u>Print</u></div> <div>PRINT</div> </div>				

1. Depress the **CE/C** key. Your display will show 0. and the tape will read 0.C.
2. Depress the **TIME/DATE** key and hold until the display is flashing.
3. Tap the **TIME/DATE** key to go to Time Mode.
4. Enter the hour, in our example 16 in military time. Your display will show 16.
5. Enter the minutes, in our example 37. Your display will show 1637.
6. Tap the **TIME/DATE** key to set the TIME. Your display will now show P 04-37-00 and the seconds will begin counting.
7. To PRINT the TIME, depress the (**#/S**) key, your tape will show #•04•37.

**NOTE:** On the **PRINT** on the paper tape, the dot in front (#•07•05) means PM, there will be no dot printed for AM.

## TECHNICAL SPECIFICATIONS

Type:	Desktop Adding Machine/Calculator, Electronic Print/VFD
Basic Operations:	Addition/subtraction and multiplication/division
Capacity:	Input and result 12 digits.
Decimal System:	Add Mode(A), Floating(F), Fixed(0,2,3,4)
Functions:	4 rules, successive calculation, memory calculation, grand total or sigma calculation, constant calculations, 2 tax calculation, delta percentage calculation, cost, sell and margin calculation.
Printer:	Character wheel selection type.
Power Consumption:	11 W
Ink:	VICTOR Twin Spool Ribbon #7010
Paper width:	Width 57.5 ± 0.5mm X Diameter 50mm
Display:	12 digit VFD display.
Operating Temp:	32°~104°F, 0°C ~ 40°C
Dimensions:	L295 X W210 X H72 mm
Weight:	1.53 kg



### **WARRANTY**

Your new VICTOR electronic calculator is guaranteed to the original purchaser for three (3) years for all parts and labor, providing repair work is performed at an authorized VICTOR Regional Service Center and the unit is sent prepaid. Warranty repair requires a copy of the original purchase invoice or receipt to be packed with the machine. The address and phone number of our National Service Depot is below.

Any warranty, statutory or otherwise, does not include service and/or replacement or repair of parts when damage or defect is a result of accident, abuse, or the elements.

### **GARANTIE**

Votre nouvelle calculatrice électronique VICTOR est garantie au premier acheteur pendant une période de trois ans pour toutes les pièces et la main d'œuvre, à condition que les réparations soient effectuées dans un Centre de Service Régional VICTOR autorisé et que l'appareil soit envoyé par courrier affranchi. Pour les Centres de Service situés à l'extérieur des États-Unis, veuillez consulter votre distributeur de fournitures de bureau local ou le site Web de VICTOR. Pour qu'une réparation soit couverte par la garantie, il faut joindre la facture ou le reçu d'achat avec l'appareil.

Toute garantie, légale ou autre, n'inclut pas l'entretien et/ou le remplacement ou la réparation de pièces lorsque le dommage ou la défectuosité est dû à un accident, à un mauvais usage ou aux éléments.

### **LA GARANTÍA**

Su nueva calculadora electrónica de VICTOR se garantiza a el comprador original durante tres años para todas las partes y labora, mientras proporcionando el trabajo de la reparación ha realizado en un Centro Regional de Reparaciones autorizado por VICTOR y la unidad se envía por el correo pagado por adelantado. Para los Centros de Servicio fuera del EE.UU por favor consultan su suministro de la ofician local distribuidor o VICTOR Web Site. La reparación de la garantía requiere una copia de la factura de la compra original o recibo ser condensado con la máquina.

Cualquier garantía, estatutario o por otra parte, no incluya el servicio y o reemplazo o reparación de partes cuando daño o defecto es un resultado de accidente, abuse, o los elementos.

**Victor Technology**  
**175 E Crossroads Parkway, Suite D.**  
**Bolingbrook, IL USA**  
**Telephone: 800-628-2420**  
**Fax: 630-972-3902**  
**<http://www.victortech.com>**





REGISTER ON LINE AT [www.victortech.com](http://www.victortech.com)

Or

FILL OUT THIS FORM AND MAIL TO THE ADDRESS ON BACK

Date Purchased: \_\_\_\_\_ Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

User's Name: \_\_\_\_\_

Company Name (if applicable): \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip: \_\_\_\_\_

Purchased From: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip: \_\_\_\_\_

\*\*\*\*\*

**VICTOR EXTENDED PROTECTION PROGRAM**

**ONLY \$25.00**

**Act now and extend your VICTOR warranty for another full year!**

**Covers all parts and labor.**

Name: \_\_\_\_\_ Date: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip: \_\_\_\_\_

To receive repair coverage on your VICTOR calculator for one full year from expiration of VICTOR'S 3 year warranty, enclose this form and proof of purchase (invoice) showing your name, complete address, model and serial number along with your check or money order for \$25.00 payable to: Victor Technology, Attn: Extended Warranty Dept., 175 E. Crossroads Parkway, Suite D. Bolingbrook, IL 60440

VICTOR will acknowledge receipt, send you an authorized coverage agreement, and provide the address of the authorized VICTOR Regional Service Center nearest you.

Repair necessitated by accident or abuse is excluded.

If repairs are needed during the coverage period, ship your VICTOR calculator to the nearest authorized VICTOR Regional Service Center, freight PREPAID. It will be promptly repaired and returned to you freight prepaid.

**Retain packing box and materials. Offer void 30 days after Purchase.**

Place  
Stamp  
Here

**Victor Technology  
175 E. Crossroads Parkway, Suite D  
Bolingbrook, IL 60440**

**Corporate Office  
And  
National Service Office  
VICTOR TECHNOLOGY  
175 E. Crossroads Parkway, Suite D.  
Bolingbrook, IL 60440  
Phone: 630-268-2420  
Fax: 630-972-3902  
[www.victortech.com](http://www.victortech.com)**